

# Electrical Conductivity Measurement of Various Cocktails & Precursors

Carlos Gross Jones

November 13, 2016

## Abstract

The electrical conductivities of numerous cocktails and precursors are measured, with a focus on predictability and reproducibility. Cocktails are evaluated and optimized for use in a magnetohydrodynamic cocktail stirrer.

## 1 Motivation

In the initial FEA models for a contactless magnetohydrodynamic cocktail stirrer, one of the greatest uncertainties was the conductivity of the cocktail. Since the entire principle is based on the induction of currents in a liquid, the electrical resistance of the liquid is of great importance. Unfortunately, the author was unable to find previous experimental electrical data on alcoholic beverages and mixtures thereof. There is of course a body of electrochemical work on the ionic properties of pure ethanol (as well as other alcohols), but that is largely irrelevant. While pure ethanol is a very poor conductor, much like water, the important factor is the inclusion of other substances (flavor, or “contaminants” from a chemistry point of view).

Therefore, in order to analyze the practicality (or lack thereof) of the contactless cocktail stirrer, it is necessary to empirically determine the conductivity of the working fluid. In fact, to give the endeavor the greatest chances of success, the purpose of this segment is not only to measure the conductivity of a representative sample, but to *optimize* for conductivity while still

## 2 Experimental Apparatus

### 2.1 Sample Geometry

In an infinite, homogeneous volume of a material with nonzero electrical conductivity, the electric field caused by two point voltages is of course easily solved, and the resultant current field (as a function of the conductivity, voltage, and distance between the points) can then be trivially computed. However, due to the economic impracticality of providing cocktails of infinite volume, it is preferable to use constrained geometry. For ease of calculation, it is best to restrict current flow to one dimension (i.e, uniform electric field between and normal to two identical charged conductive plates), allowing the resistance to be found as:

$$R = \frac{\ell}{A} \tag{1}$$

where  $\ell$  is the distance between the plates and  $A$  is the plate area.

For the purposes of these experiments, a rectangular horizontal channel was chosen, with interior dimensions 1/2” wide by 1/2” tall, and 8 inches long. Since the material forming the channel needs to be both waterproof and nonconductive, ultra-high molecular weight polyethylene (UHMW) was chosen, in the form of a section of “U” stock (McMaster-Carr P.N. 9928K53). UHMW is electrically insulating, extremely nonporous and resistant to liquid absorption, and, as an added benefit, food-safe. The channel chosen has

1/2" inside dimensions and 1/4" thick walls. The channel is placed horizontally, for ease of use, with the conducting plates mounted the appropriate distance apart. This leads to a channel 8" long and 1/2" wide. Since it is impractical for the channel to be filled *exactly* to the top with liquid, in practice the effective height will be slightly less than 1/2", with the actual liquid level being measured for each trial.

## 2.2 AC Measurement

Unfortunately, merely placing two metal plates in contact with the liquid under test and passing a DC current through it would not necessarily produce accurate results. First of all, electrolysis would take place, altering the chemical makeup of the sample; and second, most common electrode materials (such as copper) would undergo electrochemically-driven erosion, quickly contaminating the sample. Therefore, the electrodes must be coupled to the sample capacitively, and AC current used to characterize the conductivity.

The sample can be seen as an ideal resistor, with series capacitors (representing the plate couplings) at either end. To complete the circuit, a second resistor is added in series, to be the other half of a resistor divider (Fig. 1). When a known sinusoidal voltage is applied across the circuit, by measuring the voltage drop

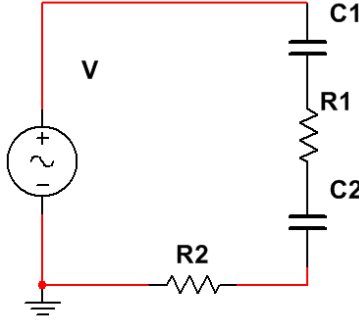


Figure 1: Equivalent Circuit

across the second (known) resistor, the impedance of the sample segment (resistive sample plus capacitive couplings) can be determined. From the properties of the materials making up the capacitor dielectrics and the area of the channel, the effective capacitance can be calculated, and thus their contribution to the impedance:

$$Z_c = \frac{1}{i\omega C} \quad (2)$$

Subtracting the capacitive impedance, and approximating the sample fluid as purely resistive, its conductivity can then be calculated.

To reduce total error, the impedance of the capacitors should be as small as possible to reduce their contribution to the impedance of the sample segment. Modeling them as parallel-plate capacitors:

$$C = \epsilon \frac{A}{d} \quad (3)$$

where  $A$  is the plate area,  $d$  the separation, and  $\epsilon$  the permittivity of the dielectric, or equivalently:

$$C = \epsilon_R \epsilon_0 \frac{A}{d} \quad (4)$$

with absolute permittivity replaced by the product of relative permittivity and the permittivity of free space. The area of the capacitors is determined by the channel area, and the thickness and relative permittivity of the dielectric is limited by material choice. The remaining parameter, frequency, should be as high as possible without introducing significant parasitic RF effects. 50 kHz was chosen as the driving frequency.

### **2.3 Evaluation of Parameters**

To separate the sample from the electrodes, consumer Saran® film was chosen for its small thickness (nominally 0.0005" thick). Chemically polyethylene, it has an  $\epsilon_R$  of 2.25. Considering the plate dimensions to be nominally 1/2" by 1/2", the calculated capacitance is 253 pF, giving an impedance at 50 kHz of 12.58 k $\Omega$ .

## **3 Evaluation of Precursors**

## **4 Development of Standard Cocktails**

## **5 Results**

### **5.1 Error Analysis**